MT 763

Instructions for use

Whirlpool

GB

4619 694 19861

Whirlpool Sweden AB

CONTENT

GB

	PAGE
A NOTE TO YOU	3
ENVIRONMENTAL HINTS	3
OVEN OVERVIEW	4
DISPLAY INDICATORS	4
CONTROL PANEL	5
INSTALLATION	6
PRECAUTIONS	7
HOW TO USE THE ACCESSORIES	9
HOW TO CHOOSE POWER LEVEL?	10
START PROTECTION	11
HOW TO INTERRUPT COOKING	11
HOW TO USE THE OPTIONAL CLOCK DISPLAY	12
HOW TO STOP & START THE TURNTABLE	13
HOW TO REHEAT WITH JET START	14
HOW TO COOK & REHEAT WITH MICROWAVES	15
HOW TO USE THE AUTO DEFROST	16
HOW TO USE THE GRILL	17
HOW TO USE THE GRILL IN COMBINATION WITH MICROWAVES	18
HOW TO USE THE CRISP MANUALLY	19
HOW TO USE THE AUTO CRISP	20
HOW TO USE THE FORCED AIR	22
HOW TO USE THE QUICK HEAT	23
HOW TO USE THE FORCED AIR IN COMBINATION WITH MICROWAVES	24
MAINTENANCE & CLEANING	25
TROUBLE SHOOTING GUIDE	26
DATA FOR TEST HEATING PERFORMANCE	27
TECHNICAL SPECIFICATIONS	27

DATA FOR TEST OF HEATING PERFORMANCE

in accordance with IEC 705.

The International Electrotechnical Commission, SC 59H, has developed a standard for comparative testing of heating performance of different microwave ovens. We recommend the following for this oven:

MT 763				
Test	**Amount**	**Approx. time**	**Power level**	**Container**
A	1000 g	12 min	750 W	Pyrex 3.226
B	475 g	5 min	750 W	Pyrex 3.827.80
C	900 g	14 min	750 W	Pyrex 3.838.80
Defrosting, minced meat	500 g	Auto		Place on a plastic plate
A	1200 g	15 min	750 W	Pyrex 3.346.87 Turntable on standstill

TECHNICAL SPECIFICATIONS

Type number	**MT 763**	
Supply voltage	For UK 230 - 240 V/50Hz	For other countries 230 V/50 Hz
Power consumption	For UK 3000 W	For other countries 2900 W
Fuse	For UK 13 A	For other countries 16 A
Timer	Electronic	
	Microwave power (acc. to IEC705. 1000 g water)	
Full power / JET	1000 W	
Combination (Max)	650 W	
	Output power	
Power Grill	900 W	
Power Forced Air	1400 W	
Dimensions:	**H x W x D**	
Outer dimensions:	318 x 529 x 462	
Oven compartment:	205 x 335 x 370	

TROUBLE SHOOTING GUIDE

If the oven does not work, do not make a service call until you have made the following checks:

* The Turntable and turntable support is in place.
* The Plug is properly inserted in the wall socket.
* The Door is properly closed.
* Check your Fuses and make sure that there is power available.
* Wait for ten minutes and then try to operate the oven once more.

This is to avoid unnecessary calls for which you will be charged.
When calling for Service, please give the serial number and type number of the oven (see Service label).

Important:
If the mains cord needs replacing it should be replaced by the original mains cord which is available via our service organisation. The mains cord must only be replaced by a trained service technician.

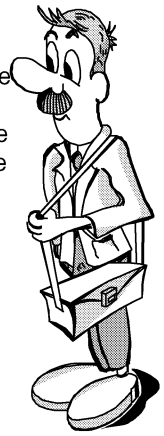

⚠ WARNING!

Service only to be carried out by a trained service technician. It is dangerous for anyone other than a trained service technician to perform repair service.

IF YOU NEED SERVICE

Whirlpool has a national network of authorised engineers and authorised service companies. Whirlpool service technicians are trained to fulfil the product warranty and provide after - warranty service, anywhere in Europe. To locate the authorised Whirlpool service company in your area, call your local dealer or look in your telephone directory under:

Appliance - household - major, service & repair
- See: Whirlpool Appliances or Authorised Whirlpool Service
(Example: XYZ Service Co.)

A NOTE TO YOU

Thank you for buying a Whirlpool appliance!

WHIRLPOOL appliances have everything you would expect of a superior appliance, plus the distinct style and thoughtful details which contribute to the overall look of your home and your enjoyment of it.

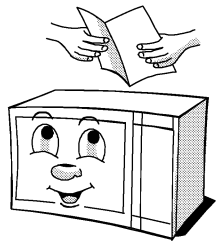

To ensure that you enjoy many years of trouble-free operation, we developed this Instruction For Use. It contains valuable information concerning how to operate and maintain your new appliance properly and safely. **Please read it carefully** and keep it in a safe place for future reference.

ENVIRONMENTAL HINTS

Packing
The packing box may be fully recycled as confirmed by the recycling symbol. Follow local disposal regulations. Keep potentially hazardous packaging (plastic bags, polystyrene etc.) out of the reach of children.

Appliance
The appliance is built from reusable materials. If you decide to scrap the appliance, it must be disposed of in compliance with local waste disposal laws. Before scrapping, cut off the power cable so that the appliance cannot be connected to the mains.

OVEN OVERVIEW

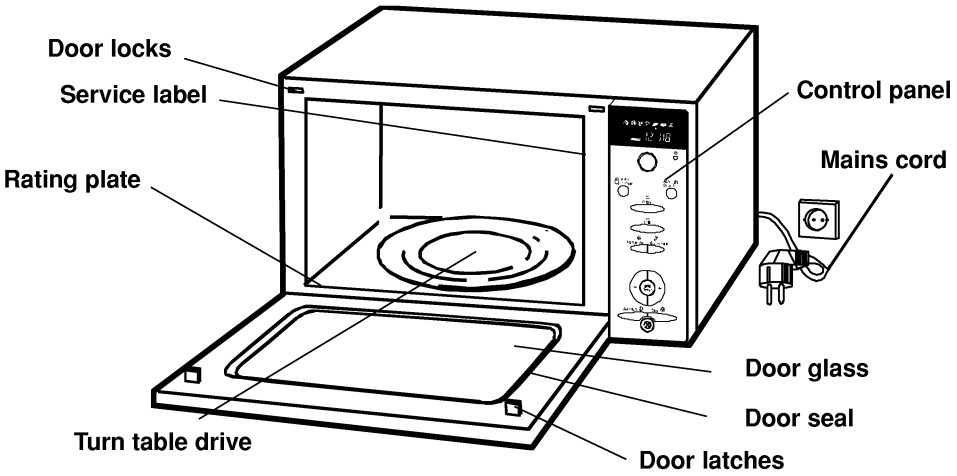

DISPLAY INDICATORS

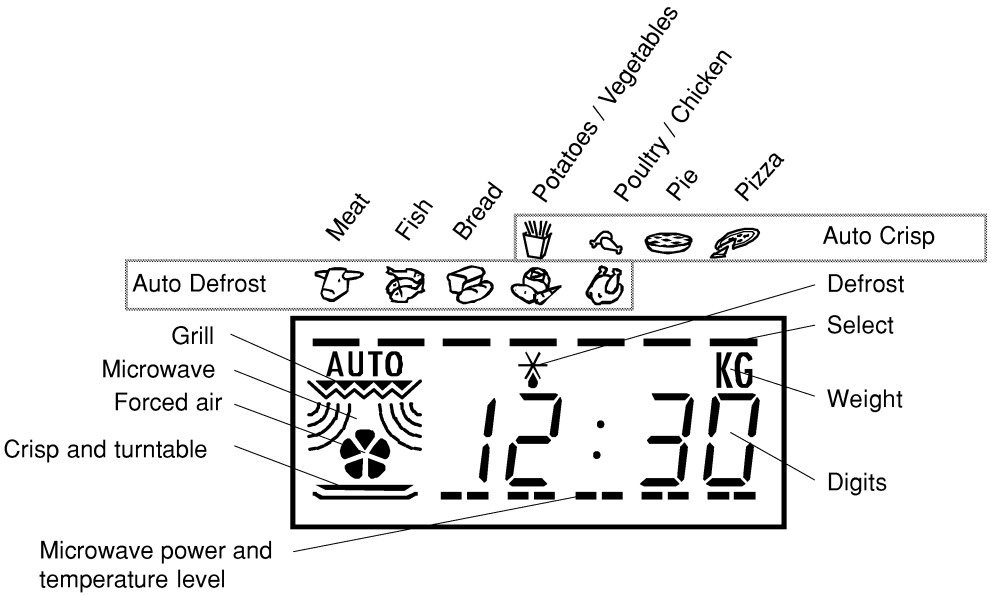

MAINTENANCE & CLEANING

Cleaning is the only maintenance normally required. It must be carried out with the microwave oven disconnected.

Do not use metal scouring pads on the inside of the oven cavity. They will scratch the surface.

At regular intervals, especially if spillovers have occurred, remove the turntable, the turntable support and wipe the base of the oven clean.

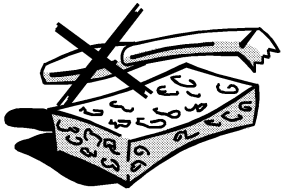

This oven is designed to operate with the turn-table in place.

Do not operate the microwave oven when the turntable has been removed for cleaning.

Use a mild detergent, water and a soft cloth to clean the interior surfaces, front and rear of the door and the door opening.

Do not allow grease or food particles to build up around the door.

For stubborn stains, boil a cup of water in the oven for 2 or 3 minutes. Steam will soften the marks.

Odours inside the oven can be eliminated by adding some lemon juice to a cup of water, placing this on the turntable and boiling for a few minutes.

The Grill element does not need cleaning since the intense heat will burn off any splashes, but the ceiling beneath it may need regular cleaning. This should be done with warm water, detergent and a sponge.

DISHWASHER SAFE:

Turntable support.

Glass turntable.



Two plate stacker.

Crisp handle.

Baking grid.

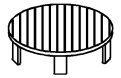

NOT DISHWASHER SAFE:

The Crisp-plate should be cleaned in mild, detergent water. Heavily soiled areas can be cleaned with a scouring sponge and a mild cleanser.

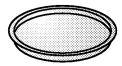

Always let the crisp-plate cool off before cleaning.

Do not immerse or rinse with water while the crisp-plate is hot. Quick cooling will damage it.

Do not use steel-wool pads. This will scratch the surface.

⚠ WARNING!

The door seals and the door seal areas must be regularly inspected for damage. If these areas are damaged the appliance should not be operated until it has been repaired by a trained service technician.

Abrasive cleansers, steel-wool pads, gritty wash cloths, etc., can damage the control panel, and the interior and exterior oven surfaces. Use a sponge with a mild detergent or a paper towel with spray glass cleaner. Apply spray glass cleaner to a paper towel.

Do not spray directly on the oven.

HOW TO USE THE FORCED AIR IN COMBINATION WITH MICROWAVES

Use this function to cook roast meats, poultry, jacket potatoes, frozen convenience foods, sponge cakes, pastry, fish and puddings.

USER ACTION | OVEN REACTION

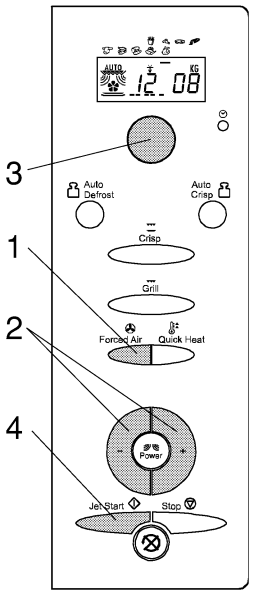

1. Press the FORCED AIR button.

* The Forced air indicator is lit.
* The temperature indicator is flickering.
* The set temperature is displayed.

2. Press the **+** / **-** buttons.

* The microwave symbol is lit.
* The power level is displayed.

3. Turn the ADJUST knob.

* The time is displayed.

4. Press the START button.

* The Microwave symbol flashes.
* The Forced air symbol flashes
* The cooking time is displayed counting down

Turntable rotation: ON or OFF

When the cooking time has elapsed a signal will be heard and the cooking process will stop.

Use the Baking-grid to put food on to allow the air to circulate properly around the food.

During the heating process the current temperature is indicated and rising on the temperature bar.

Once the heating process have been started the temperature can easily be adjusted by pressing the Forced air button. Also the power level is possible to change. The Max. possible Power level when using the Forced air is limited (se technical specifications).

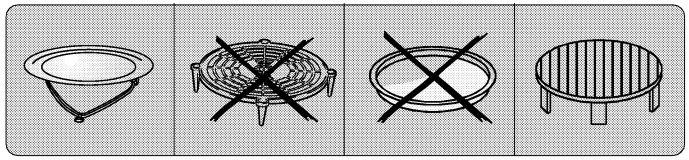

CONTROL PANEL

Digital display. This display includes a 24 hour clock and indicator symbols to tell you the time of day, cooking time, power level, etc.

Adjust knob. Use this knob to set the cooking time, time of day or weight.

Auto Defrost **Auto Defrost button.** Use this button to select type of food to be defrosted.

Forced air button. Use this button to select the Forced air function and temperature.

Power button(center). Use this button to check the set microwave power level.

Power button(minus). Use this button to reduce the set microwave power level

Start / **Jet Start button.** Press this button to automatically start with the maximum power level and the cooking time set to 30 seconds. Each additional press increases the cooking time by 30 seconds. This button also works as a normal start button after setting a function.

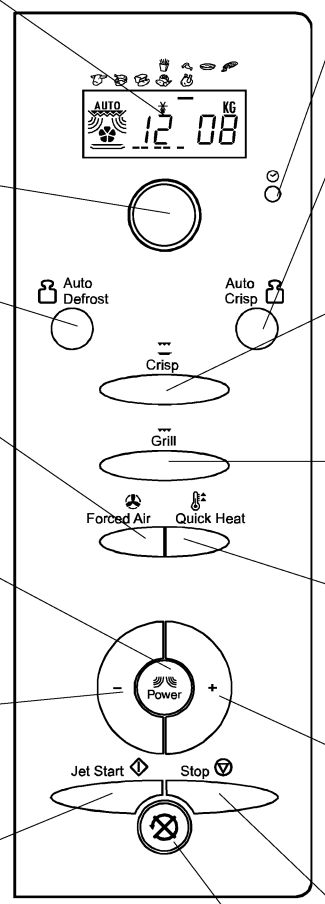

Clock button. Use this button to select the 24 hour clock and set the time of day.

Auto Crisp **Auto Crisp button.** Use this button to select one of 4 food classes.

Crisp button. Use this button when cooking with the Crisp plate (manually).

Grill button. Use this button to select the grill function.

Quick heat button. Use this button to quickly preheat the oven cavity.

Power button(plus). Use this button to increase the set microwave power level

Stop button. Use this button to stop or reset any of the oven functions.

Turntable button. Use this button to turn the turntable function on / off.

INSTALLATION

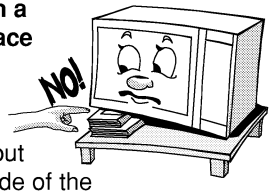

Place the oven on a stable, even surface that is strong enough to hold the oven and the food utensils you put in it. The control side of the unit is the heavy side. Use care when handling.

Position the oven at a distance from other heating sources. The cooling air, which is taken in by the oven, must not exceed 35°C temperature. For sufficient ventilation there must be a space of at least 15 cm above the oven.

Make sure that the appliance is not damaged. Check that the oven door closes firmly against the door support and that the internal door seal is not damaged. Empty the oven and clean inside it with a soft, damp cloth.

The ventilation openings on the oven must not be covered. Blocking the air intake or exhaust vents may cause damage to the oven and poor cooking results. Make sure the microwave oven feet are in place and ensure the space underneath the oven is empty to ensure proper airflow.

Prior to connecting, check that the voltage on the rating plate corresponds to the voltage in your home.

Do not operate this appliance if it has a damaged mains cord or plug, if it is not working properly, or if it has been damaged or dropped. Electrical shock, fire or other hazards may result.

The earthing of this appliance is compulsory. The manufacturer will accept no responsibility for injury to persons, animals or damage to objects arising from the non-observance of this requirement.

When the appliance is first plugged in or after a power failure, the display is blank. If required, the oven can display a 24 hour digital Clock. When the Clock function is not programmed the display will remain blank until the cooking time is set.

Only use the microwave oven for domestic use and for its cooking purposes.

The oven can operate in an ambient temperature ranging from +5°C to +35°C.

The oven can be operated only if the oven door is firmly closed.

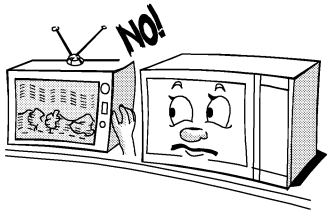

Poor television reception and radio interference may result if the oven is located close to a TV, radio or aerial.

⚠ WARNING!

THIS APPLIANCE MUST BE EARTHED!

HOW TO USE THE QUICK HEAT

Use this function to preheat the empty oven. **Do not place food** before or during preheating in the oven. It will be burned from the intense heat.

	USER ACTION	OVEN REACTION
1	1. Press the QUICK HEAT button repeatedly.	* The temperature indicator is flickering. * The set temperature is displayed.
2	2. Press the START button.	* The heating begins.
		When the set temperature is reached, a signal will be heard and the oven switches to the Forced air function.
	Turntable rotation: ON or OFF	

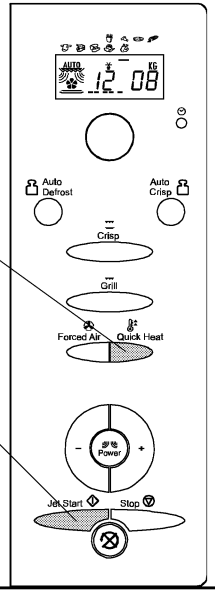

Sometimes it is necessary to preheat the oven to obtain the very best result. This is quickly obtained with the Quick Heat function. Preheating of the oven is usually done before using the Forced air function. The oven therefore switches to this function automatically when the set temperature is reached.

The oven then keeps the set temperature for 10 minutes before switching off. During this time the oven is waiting for you to insert the food and make the normal settings for cooking.

During the quick heating process both Forced air and Grill is used to raise the temperature.

Preheating is always done with the oven empty or with the baking-grid in place, therefore it is important that the microwave function is off. This oven always deselects the microwave function automatically when you press the Quick Heat button, for safety. The default setting when pressing the Quick Heat button is 175°C.

If you want to cook with Forced air and microwaves combined, you have to select microwaves after the preheating is finished.

During the heating process the current temperature is indicated and rising on the temperature bar.

Once the heating process have been started the temperature can easily be adjusted by pressing the Quick Heat button.

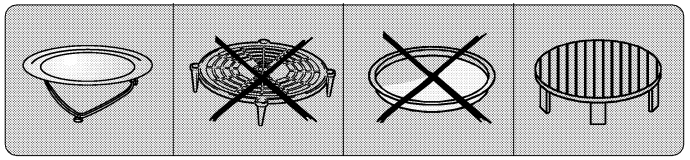

HOW TO USE THE FORCED AIR

Use this function to cook meringues, pastry, sponge cakes, soufflés, poultry, roast meats and convenience foods.

	USER ACTION	OVEN REACTION
1	1. Press the FORCED AIR button repeatedly.	* The Forced air indicator is lit. * The temperature indicator is flickering. * The set temperature is displayed.
2	2. Turn the ADJUST knob.	* The time is displayed.
3	3. Press the START button.	* The Forced air symbol flashes * The cooking time is displayed counting down
		When the cooking time has elapsed a signal will be heard and the cooking process will stop.

Turntable rotation: ON or OFF

The default setting when pressing the Forced Air button is 175°C

Don't leave the door open for long periods as the temperature inside will drop.

Please read the chapter "How to use the Quick Heat" later in this manual.

For cooking times under 20 minutes, preheat the oven using the Quick Heat function. When the temperature is reached, the oven switches automatically to Forced air, insert the food, close the door and set the cooking time. Press the start button.

Use the Baking-grid to put food on to allow the air to circulate properly around the food.

Use the Crisp-plate as a baking plate on top of the Baking-grid when baking cookies, meringues or rolls.

During the heating process the current temperature is indicated and rising on the temperature bar.

Once the heating process have been started the temperature can easily be adjusted by pressing the Forced air button.

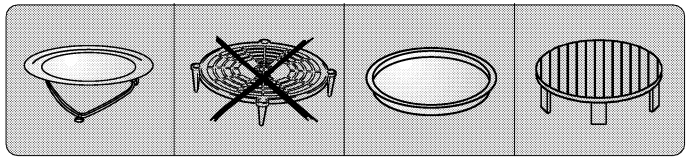

PRECAUTIONS

⚠ IMPORTANT!

The appliance should not be operated without food in the oven when using microwaves. Operation in this manner is likely to damage the appliance.

If you practice operating the oven, put a glass of water inside. The water will absorb the microwave energy and the oven will not be damaged.

Do not immerse the mains cord or plug in water. Keep the cord away from hot surfaces.

Do not let the mains cord hang over edge of table or counter.

Do not store or use this appliance outdoors. Do not use this product near a kitchen sink, in a wet basement, or near a swimming pool, or similar.

Do not use the cavity for storage purposes.

Do not leave paper products, cooking utensils, or food in the cavity when not in use.

Never lean on the door when the door is open. Injury could result.

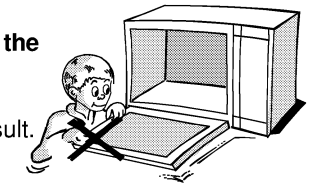

Do not heat, store or use flammable materials in or near the oven. Fumes can create a fire hazard or explosion.

Use this appliance only for its intended use as described in this manual.

Do not use corrosive chemicals or vapours in this appliance. This type of oven is specifically designed to heat or cook food. It is not designed for industrial or laboratory use.

Do not over-cook food. Fire could result.

Do not use your microwave oven for drying textiles, paper, spices, herbs, wood, flowers, fruit or other combustible materials. Fire could result.

Do not leave the oven unattended, especially when using paper, plastic or other combustible materials in the cooking process. Paper can char or burn, and some plastics can melt if used when heating foods.

⚠ WARNING

Only allow children to use the oven without supervision when adequate instructions have been given so that the child is able to use the oven in a safe way and understands the hazards of improper use.

Remove wire twist-ties from paper or plastic bags before placing bag in the oven.

If material inside / outside the oven should ignite, keep oven door closed, turn the oven and fan off. Disconnect the power cord or shut off power at the fuse or circuit breaker panel.

PRECAUTIONS

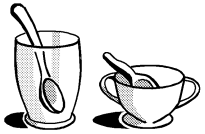

When heating liquids, e.g. beverages or water in your microwave oven, overheating the liquid beyond boiling point can occur without evidence of bubbling. This could result in a sudden boil over of the hot liquid. To prevent this possibility the following steps should be taken:

1. Avoid using straight-sided containers with narrow necks.
2. Stir the liquid before placing the container in the oven and let the teaspoon remain in the container.
3. After heating, allow to stand for a short time, stirring again before carefully removing the container from the oven.

⚠ WARNING!

Do not use your microwave oven for heating food or liquids in airtight sealed containers. The pressure increases and may cause damage when opening or may explode.

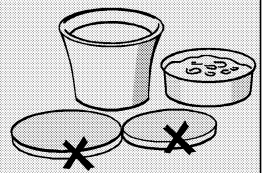

Do not use your microwave oven for cooking or reheating whole eggs with or without shell since they may explode.

Do not use your microwave oven for deep frying, because the oil temperature cannot be controlled.

Always refer to a microwave cookbook for details. Especially, if cooking or reheating food that contains alcohol.

After heating baby food or liquids in a baby bottle or in a baby food jar, always stir and check the temperature before serving. This will ensure that the heat is evenly distributed and the risk of scalding or burns can be avoided.
Ensure the Lid and the Teat are removed before heating!

Use hot pads. Microwave energy does not heat containers, but the hot food does. Heat from the Grill and Forced air, will cause container and oven parts to become hot. Also note that the Crisp-plate always becomes very hot when used.

Use oven mitts to prevent burns, when touching containers, oven parts, and pan after cooking.

HOW TO USE THE AUTO CRISP

The oven needs to know the type of food to be Autocrisped.

Four food categories have been designed into your oven. They will provide you with good end results.

PIZZA'S
(200 - 600 g)

CHICKEN NUGGETS
(200 - 600 g)

QUICHE & PIES
(200 - 600 g)

POTATO PRODUCTS
(200 - 600 g)

Only use the supplied Crisp plate with this function. Other available Crisp plates on the market will not give the correct result when using this function.

If the weight is lesser or greater than recommended weight:
Use the manual "Crisp function" to crisp the food manually.

Please note that a few minutes standing time always improves the result.

It is not possible to change or switch the Power level or Grill, on/off, when using the Auto Crisp function.

⚠ IMPORTANT!

Take the frozen food directly from the freezer and place it on the crisp plate.
Do not place any containers or wrappings on the Crisp plate!

Only the food is to be placed on the Crisp plate.
If possible use only pieces of the same size when reheating chicken.

HOW TO USE THE AUTO CRISP

Use this function to quickly reheat your food in one step from frozen to serving temperature. **Auto Crisp is used only** for frozen ready made foods.

Auto Crisp | USER ACTION | OVEN REACTION

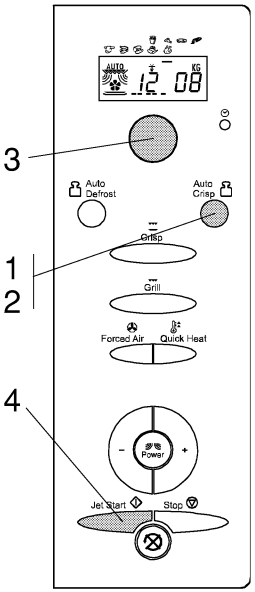

1. Press the AUTO CRISP button.

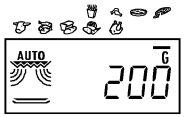

* The first of the four food categories is indicated.
* The Microwave symbol is lit.
* The Grill symbol is lit.
* The Crisp symbol is lit.

2. Continue to press the AUTO CRISP button.

* The selected food class is indicated.

3. Turn the ADJUST knob.

* The weight is displayed.

4. Press the START button.

* The Microwave symbol flashes.
* The Grill symbol flashes.
* The time is displayed counting down in minutes.

When the Auto Crisp program is finished a signal will be heard and the cooking process will stop.

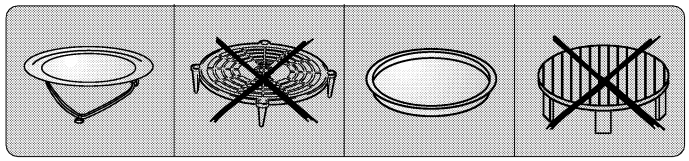

HOW TO USE THE ACCESSORIES

⚠ IMPORTANT!

There are a number of accessories available on the market. Before you buy, make sure they are suitable for microwave use.

When you put food in the microwave oven, ensure that food, food supports or covering do not come in direct contact with any of the internal walls or the ceiling of the cavity.

This is especially important with accessories made of metal or metal parts.

If accessories containing metal comes in contact with the internal walls or the ceiling, while the oven is in operation, sparking will occur and the oven will be damaged.

Always ensure that the turntable is able to turn freely before starting the oven.

Ensure that the utensils you use are oven proof and allow microwaves to pass through them before cooking.

TURNTABLE SUPPORT

Use the turntable support under the Glass turntable. Never put any other utensils on the turntable support.

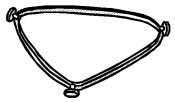

* Fit the turntable support on its locator in the oven.

GLASS TURNTABLE

Use the Glass turntable with all cooking methods. It collects the dripping juices and food particles that otherwise would stain and soil the interior of the oven.



* Place the Glass turntable on the turntable support.

CRISP-PLATE

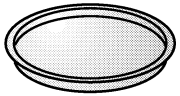

Place the food directly on the Crisp-plate. Always use the Glass turntable as support when using the Crisp-plate.

Do not use the crisp-plate with the turntable on standstill.

Do not place any utensils on the Crisp-plate since it will quickly become very hot and is likely to cause damage to the utensil.

The Crisp-plate may be preheated before use (max. 3 min). Always use the Crisp function when preheating the crisp-plate.

CRISP HANDLE

Use the supplied special Crisp handle to remove the hot Crisp plate from the oven.

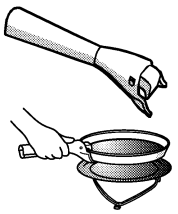

HOW TO USE THE ACCESSORIES

TWO PLATE STACKER

The Two plate stacker is excellent for two level reheating. Simply place one plate on the Glass Turn-table and a second plate on the Two plate stacker above. The Two plate stacker may be cleaned in dishwashers.
Do not use together with the Grill, Crisp, Forced Air or Quick Heat. It will melt.

BAKING GRID

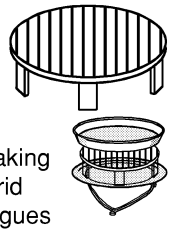

Use the Baking-grid to put food on to allow the air to circulate properly around the food.
Use the Crisp-plate as a baking plate on top of the Baking-grid when baking cookies, meringues or rolls.

⚠ IMPORTANT!

At the bottom of pages describing appliance functions, symbols for the accessories are shown.

If a symbol is crossed, this particular accessory should not be used with the described function.

HOW TO CHOOSE POWER LEVEL?

MICROWAVES ONLY

Level	To be used for:
JET	Reheating of beverages, water, clear soups, coffee, tea or other food with a high water content. If the food contains egg or cream choose a lower power.
850/750 W	Cooking of vegetables, fish, meat etc.
650 W	Cooking dishes, not possible to stir.
500 W	More careful cooking e.g. high protein sauces, cheese and egg dishes and to finish cooking casseroles.
350 W	Simmering stews.
160 W	Defrosting.
90 W	Softening butter, cheese and ice cream.
0 W	Setting the standing time.

MICROWAVES & GRILL

Level	To be used for:
90 - 160 W	Large cuts of meat
160 - 350 W	Fish
350 - 500 W	Poultry
500 - 650 W	Gratins

MICROWAVES & FORCED AIR

Level	To be used for:
90 - 160 W	Cakes, bread, roasts
160 - 350 W	Baked fish, fish gratins
350 - 500 W	Poultry
500 - 650 W	Large chicken, vegetables ie. jacket potatoes, gratins.

HOW TO USE THE CRISP MANUALLY

Use this function to reheat and crisp pre-cooked pizzas and other dough based foods. It is also good for frying bacon and eggs, sausages, hamburgers etc.

	USER ACTION	OVEN REACTION
2	1. Press the CRISP button.	* 5 sec is displayed * The Grill symbol is lit * The Crisp symbol is lit * The Microwave symbol is lit.
1	2. Turn the ADJUST knob.	* The time is displayed.
3	3. Press the START button.	* The Microwave symbol flashes. * The Grill symbol flashes * The cooking time is displayed counting down

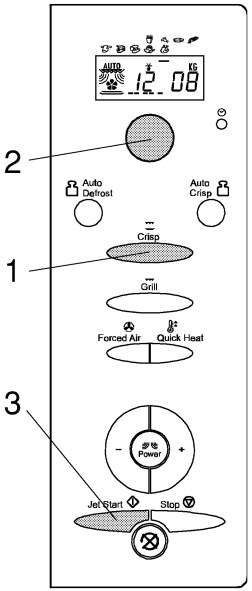

When the cooking time has elapsed a signal will be heard and the cooking process will stop.

The oven automatically works with Microwaves and Grill in order to heat the Crisp-plate. This way the Crisp-plate will rapidly reach its working temperature and begin to brown and crisp the food.

It is not possible to change or switch, the Power level or Grill, on/off, when using the Crisp function.

⚠ IMPORTANT!

The oven and the crisp-plate become very hot when using this function.
Do not place the hot crisp-plate on any surface sucseptable to heat.
Be careful, not to touch the ceiling beneath the Grill element.

Ensure that the Crisp-plate is correctly placed in the middle of the Glass turntable.
Use oven mittens or **the special Crisp handle** supplied when removing the hot Crisp-plate.

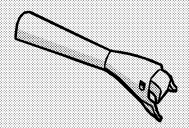

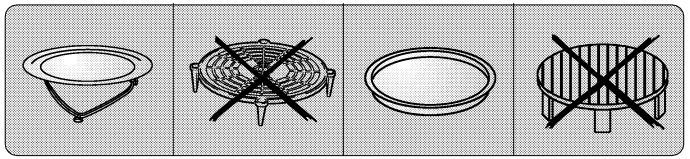

HOW TO USE THE GRILL IN COMBINATION WITH MICROWAVES

Use this function to cook such foods as Gratins, Lasagne, Poultry and Baked potatoes.

	USER ACTION	OVEN REACTION
3 / 1	1. Press the GRILL button.	* 5 sec is displayed. * The Grill symbol is lit.
2	2. Press the + / - POWER button.	* The Microwave symbol is lit. * The powerlevel is displayed.
	3. Turn the ADJUST knob.	* The time is displayed.
4	4. Press the START button.	* The Microwave symbol flashes. * The Grill symbol is flickering. * The cooking time is displayed counting down.

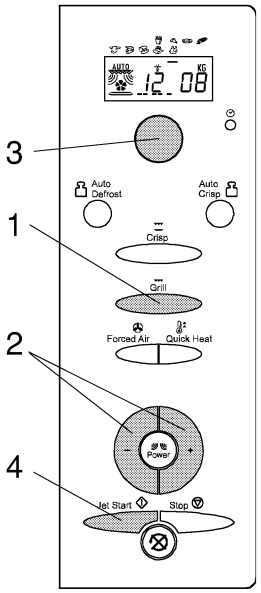

Turntable rotation: On or OFF

When the cooking time has elapsed a signal will be heard and the cooking process will stop.

During operation you can switch the Grill element on/off by pressing the Grill button. The Max. possible microwave power level when using the Grill is limited(see technical specifications).

It is possible to switch the microwaves off by reducing the microwave power level to 0 W. When 0 W is reached, the oven switches to Grill only mode. You should only use this feature if the turntable function is in operation, else the oven will switch off when 0 W is reached.

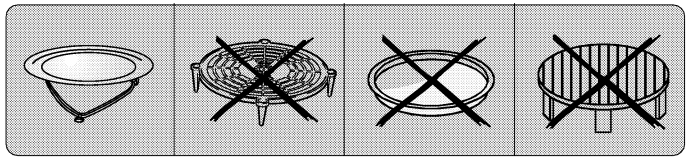

START PROTECTION

The Start Protection is activated one minute after the oven has returned to "stand by mode". (The oven is considered to be in "stand by mode" when the 24 hour Clock is displayed, or if the Clock has not been set, when the display is blank).

If you attempt to operate the oven without putting food into it, the display will display **"door"**.

The door must be opened and closed e.g. putting food into it, before the start protection is released.

HOW TO INTERRUPT COOKING

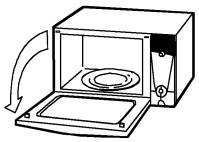

To interrupt the cooking process:
The cooking process can be interrupted to check, turn or stir the food by opening the door. The setting will remain for 10 minutes to indicate the interruption, after which it will disappear. If you open the door please consider the following:

If the cooking process has not been interrupted: A beep will signal the completion of the programme. It will continue to sound every minute for 10 minutes. Unless the STOP button is pressed.

To continue the cooking process:
Close the door and press the START button once.
The cooking process continues from where it was interrupted.
Pressing the START button twice will increase the time by 30 seconds.

Restarted cooking:
When the cooking process is complete, the oven will hold the current settings for 10 minutes unless the STOP button is pressed or the door is opened. This enables you to continue / restart cooking simply by pressing the START button. Cooking may also be extended by pressing the START button a number of times. One press for each 30 seconds. All other settings remain the same.
Note: The oven will only hold the settings for 30 seconds if the door is opened and then closed after the cooking is finished.

If you don't want to continue cooking:
Remove the food, close the door and press the STOP button

HOW TO USE THE OPTIONAL CLOCK DISPLAY

Use this function to set the time of day.

	USER ACTION	OVEN REACTION
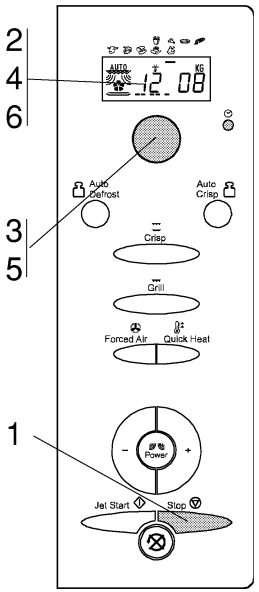	1. Press the STOP button.	* The two dots are lit.
	2. Press the CLOCK button.	* The two left hand digits (hours) flicker.
	3. Turn the ADJUST knob to set the hours.	* The set hours will continue to flicker
	4. Press the CLOCK button again.	* The two right hand digits (minutes) flicker.
	5. Turn the ADJUST knob to set the minutes.	* The set minutes will continue to flicker.
	6. Press the CLOCK button again.	* The Clock is set and in operation.

Keep the door open while setting the Clock. This gives you 10 minutes to complete the setting of the Clock.

If the door is kept shut, each step must be accomplished within 30 seconds. Otherwise the oven will return to “stand by“ and it will be necessary to start again from the beginning.

If you wish to remove the Clock from the display once it has been set, simply press the Clock button and then press the Stop button. To reinstate the Clock, follow the below procedure.

HOW TO USE THE GRILL

Use This function to quickly give a pleasant brown surface to the food.

	USER ACTION	OVEN REACTION
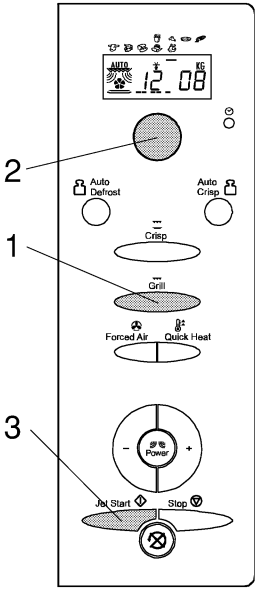	1. Press the GRILL button.	* 5 sec is displayed. * The Grill symbol is lit.
	2. Turn the ADJUST knob.	* The time is displayed.
	3. Press the START button.	* The Grill symbol flashes * The cooking time is displayed counting down.
		When the cooking time has elapsed a signal will be heard and the cooking process will stop.

Do not leave the oven door open for long periods when the Grill is in operation as this will cause a drop in temperature.

Note:
Pressing the Grill button during cooking switches the Grill element on and off. The timer will continue to count down when the Grill element is turned off.

⚠ IMPORTANT!
Ensure that the utensils used are heat resistant and oven proof before grilling with them.
Do not use plastic utensils when grilling. They will melt. Items of wood or paper are not suitable either.

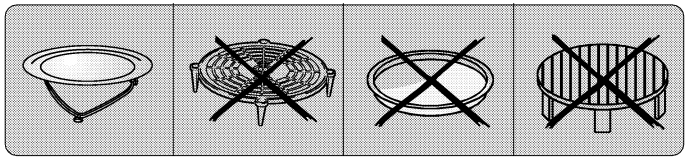

HOW TO USE THE AUTO DEFROST

Use this function for defrosting of **raw, parboiled, pre-cooked food** and **bread.** All other foods should be defrosted using the Manual defrost function.

Auto Defrost | USER ACTION | OVEN REACTION

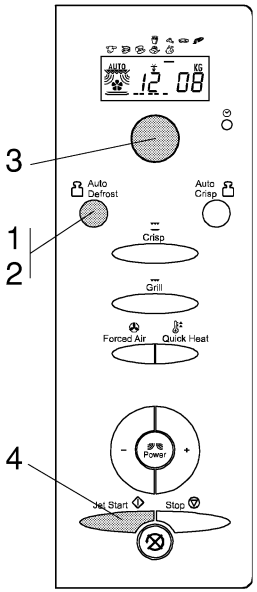

1. Press the AUTO DEFROST button.
   * The display now shows weight in grams (gr.) and the first of the five food classes is indicated.
2. Continue to press the AUTO DEFROST button.
   * The selected food class is indicated.
3. Turn the ADJUST knob.
   * The weight is displayed.
4. Press the START button.
   * The defrosting process begins.
   * The Microwave working symbol flashes.
   * The defrosting time is displayed counting down

Five food classes have been designed into your oven and they cover the whole spectrum of food.

MEAT (50 g - 2 Kg)

FISH (50 g - 2 Kg)

BREAD (50 g - 2 Kg)

VEGETABLES (50 g - 2 Kg)

POULTRY (50 g - 3 Kg)

When the Defrost program is finished a signal will be heard and the defrosting process will stop.

The Auto Defrost function provides you with good end results. The oven needs to know the type of food to be defrosted and the net weight of the food.
Follow the procedure for "How to cook and reheat with microwaves" and choose 160 W when defrosting manually. When softening ice-cream or butter you should manually adjust the setting to 90 W.

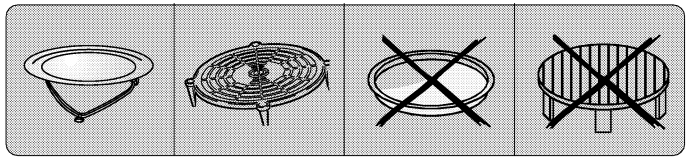

HOW TO STOP & START THE TURNTABLE

Use this function when the vessel is too large to be able to turn freely, e.g. when cooking a large gratin, salmon or a big turkey.

USER ACTION | OVEN REACTION

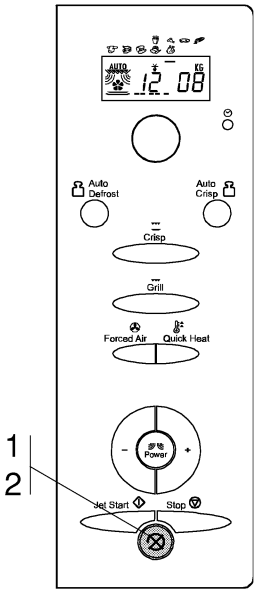

1. Press the TURNTABLE button.
   * The turntable symbol is lit when the turntable is in function.
2. Press the TURNTABLE button.
   * The turntable symbol is switched off when the turntable is stopped.

Only some of your oven functions will work properly with the turntable rotation switched off. Those functions are marked with this symbol.

All functions are usually used with the turntable rotation switched on.

In some cases it is better to stop the turntable rotation to enable you to use large square utensils too big to turn without coming into contact with the cavity walls.

If you switch the turntable off before or during the use of a function which does not support the turntable rotation beeing switched off, the oven will stop and a signal will be heard. The turntable symbol will flash briefly. The oven returns to standby mode if no buttons are pressed within 30 seconds.

HOW TO REHEAT WITH JET START

Use this function for the quick reheating of items such as clear soups, coffee, tea or other foods with high water content.

USER ACTION | OVEN REACTION

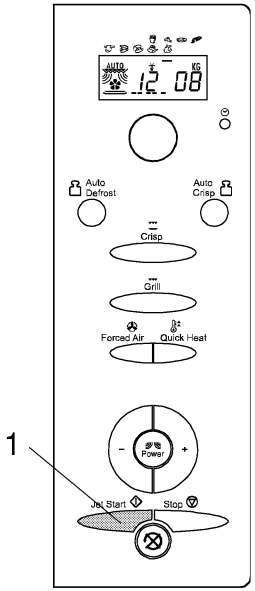

1. Press the JET START button.

* The Microwave working symbol flashes.
* The Power level bar is scrolling.
* The cooking time is displayed counting down.

When the time has elapsed a signal will be heard and the process will stop.

Turntable rotation:
ON or OFF

When the Jet Start button is pressed the oven will operate at full power for 30 seconds. Each subsequent press will increase the time by 30 seconds. Pressing the Jet Start button during normal cooking only increases the time.

If you open and then close the door during normal cooking (cooking interruption), restarting by pressing the Jet Start button once will not affect the Time and Power settings. Pressing the Jet Start button again will increase the time by 30 seconds for each press.

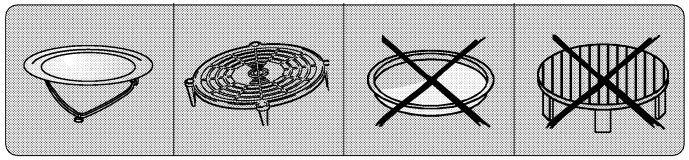

HOW TO COOK & REHEAT WITH MICROWAVES

Use this function for normal cooking and reheating, by setting the time and power needed.

USER ACTION | OVEN REACTION

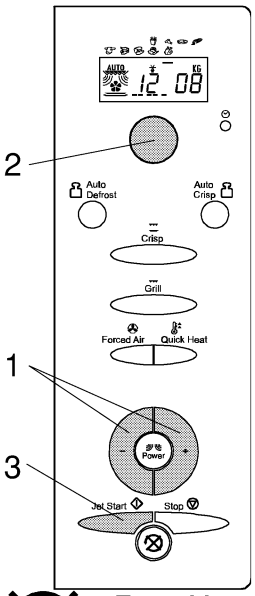

1. Press the **+** / **-** buttons.

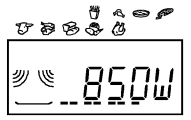

* The power level is displayed.

2. Turn the ADJUST knob.

* The time is displayed.

3. Press the START button.

* The Microwave working symbol flashes.
* The cooking time is displayed counting down

When the cooking time has elapsed a signal will be heard and the cooking process will stop.

Turntable rotation:
ON or OFF

Once the cooking process has been started the time can easily be increased in 30 second steps by pressing the Start button. Each press increases the time with 30 seconds. You may also alter the time by turning the Adjust knob to increase or decrease the time.

Pressing the POWER button (center) during cooking displays the current Power level for 2 sec. To alter the set power level, simply press the plus or minus buttons until the desired power level is reached.